


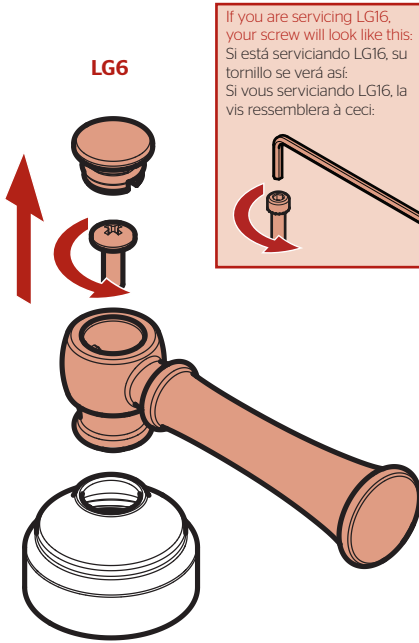


- 1 Uninstall handle lever**  
Desinstale la palanca del mango  
Désinstaller le levier de poignée

- 2 Uninstall lever handles**  
Desinstalar el mango de la palanca  
Poignée de levier de désinstallation



- 3 Install cross handles**  
Instale los mangos cruzados  
Installer les poignées transversales

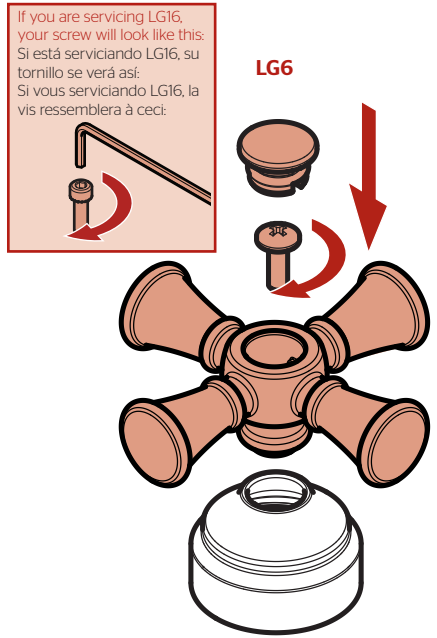

**For LG6 Only: This Crosshandle is for the Diverter Handle (the center handle)**

Para LG6 solamente: Este Crosshandle es para el mango del desviador (el mango central)  
Pour LG6 seulement: Cette poignée Croix est de gérer déviateur (poignée centrale)

